



## PARTS LIST

### UPPER WASTE ASSEMBLY

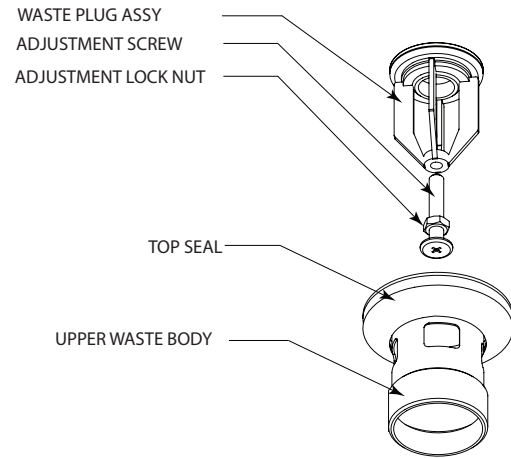


### LOWER WASTE ASSEMBLY

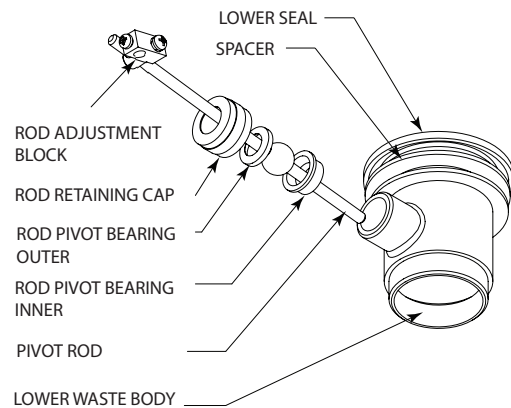


1

Assemble the Pivot Rod to the Lower Waste Body. Ensure the Rod Pivot Bearing INNER is located first. Locate the Pivot Rod into Pivot Bearing Inner. Slide the Rod Pivot Bearing OUTER and the Rod Retaining Cap over the Pivot Rod. Tighten the Rod Retaining Cap to the Lower Waste Body firmly.

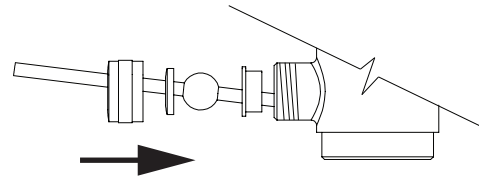


2

Ensure the top seal is in correct position on the Upper Waste Assy. Position the Upper Waste Assy through the basin waste hole. Ensure the Lower Seal is in correct position. Place the Lower Waste Body Assy directly underneath and screw together. Tighten firmly.

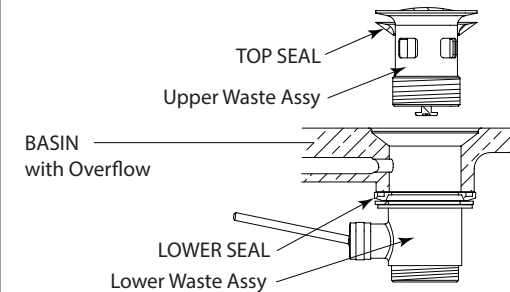


3

**NOTE:** Refer to Mixer instructions for mixer installation. Slide the Rod Adjustment Block onto the Pivot Rod. Slide the Mixer Rod into the hole at the rear of the mixer down through the basin. Locate the Mixer Rod into the Rod Adjustment Block. Tighten both screws.

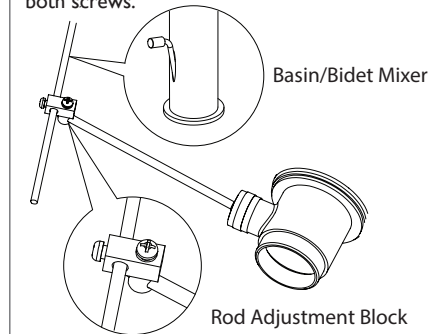


4

Push the Mixer Rod down to test if the plug is lifting sufficiently.

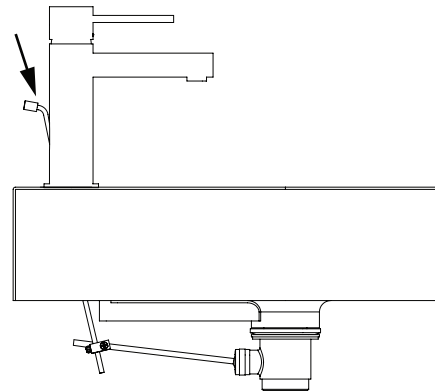


5

Push the Mixer Rod down to test if the plug is lifting sufficiently. If adjustment is needed, remove the Waste Plug Assy. Loosen the Adjustment Locknut and adjust the screw as indicated with a screwdriver. Tighten locknut after adjustment.

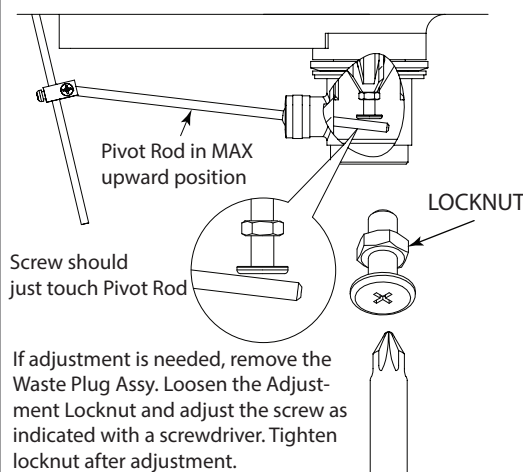

6

Complete assembly by connecting P Trap. Test and check for leaks.

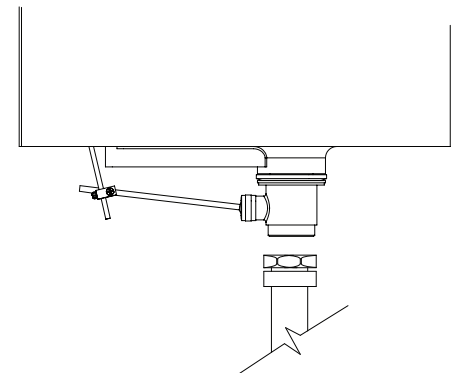

recommended  
working pressure  
**150-500  
kPa**



maximum hot  
water temperature  
**75  
degrees**

#### **NOTE:**

- If the pressure exceeds or is likely to exceed 550kPa, an approved pressure limiting device must be installed.
- Flush out all pipe work prior to installation.
- If the water temperature exceeds 75°C, an approved tempering valve must be fitted.
- Installation should comply with Australian standard AS3500.1 or relevant local authority requirements. Showers may not be suitable for use within:
- Gravity-fed water systems

• Pressure supply less than 150kPa;

**NOTE:** The 500kPa maximum water supply pressure does not apply to fire service outlets.

Failure to comply with the above may void all warranties.

#### **WARRANTY:**

Please refer to the full warranty statement enclosed with the product before installing. Or visit [www.phoenixtapware.com.au](http://www.phoenixtapware.com.au) to download a

#### **MAINTENANCE AND CARE:**

- Products should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

#### **DISCLAIMER:**

While we aim to ensure the specifications shown are correct at the time of printing, Phoenix Tapware reserves the right to make modifications without prior notice. Always use the physical product measurements for mark-ups and roughing-in as the line drawing shown may differ from the actual product over time.

\*All measurements are shown in millimeters.