
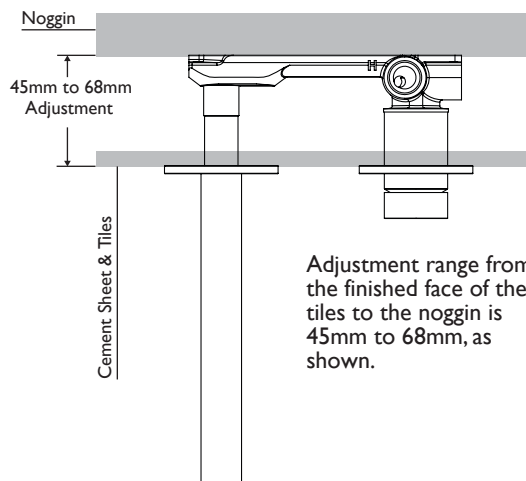


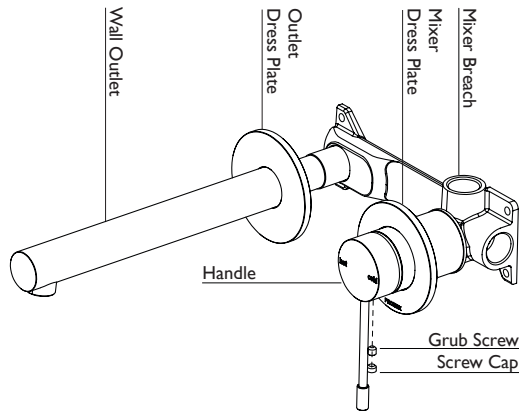


Adjustment range from the finished face of the tiles to the noggin is 45mm to 68mm, as shown.

1

Screw the Mixer Breach onto Noggin.


Ensure that the Outlet and Mixer Body centres are level.

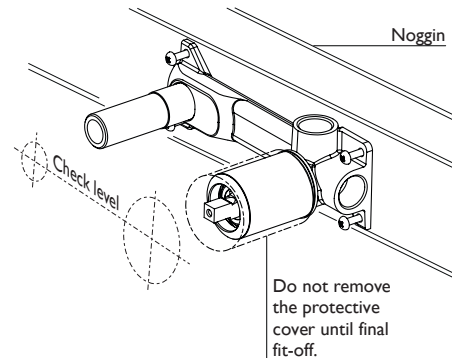

2

Connect hot and cold water supply, as shown.

Test and check for leaks.

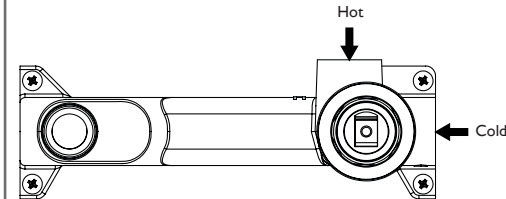


3

Check centre distance of the breach assembly for 120mm or 140mm size.

Mark centre line according to measured result.

Create a 25mm hole and a 45mm hole on the cement sheet and tiles, as shown.

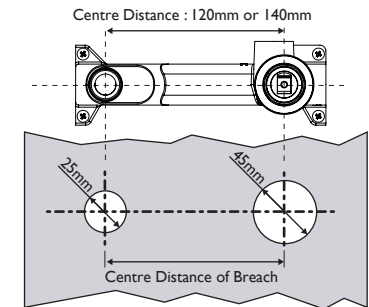


4

Apply Teflon tape to Elbow Thread.

Gently push the outlet dress plate into position.

Screw Wall Outlet to the Elbow Thread until firmly tightened and the outlet hole is facing down.

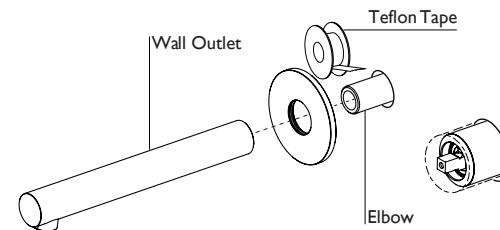


5

Remove the protective cover from the mixer.

Fit Mixer Handle into position and tighten Grub Screw to secure handle.

Fit Screw Cap into position.

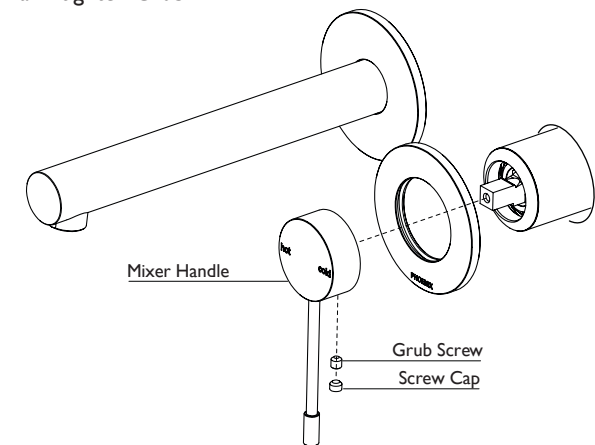

recommended working pressure
150-500KPa
maximum hot water temperature
75 degrees

NOTE:

- If the pressure exceeds or is likely to exceed 550kpa, an approved pressure limiting device must be installed.
- Flush out all pipe work prior to installation.
- If the water temperature exceeds 75°C, an approved tempering valve must be fitted.
- Installation should comply with Australian standard AS3500.1 or relevant local authority requirements.
- Showers may not be suitable for use within:
 - Gravity-fed water systems

- Some instantaneous hot water systems; or
 - Pressure supply less than 150kPa;
- NOTE: The 500kPa maximum water supply pressure does not apply to fire service outlets.

Failure to comply with the above may void all warranties.

WARRANTY:

Please refer to the full warranty statement enclosed with the product before installing.

MAINTENANCE AND CARE:

- Chrome plated surfaces should be cleaned with mild liquid detergent or soap and water.
- Do not use cream cleaners or citrus based cleaning products, as they are abrasive.
- Use of unsuitable cleaning agents may damage the surface. Any damage caused in this way will not be covered by warranty.

DISCLAIMER:

While we aim to ensure the specifications shown are correct at the time of printing, we reserve the right to make modifications without prior notice. Always use the physical product measurements for mark-ups and roughing-in as the line drawing shown may differ from the actual product over time.

*All measurements are shown in millimeters.